



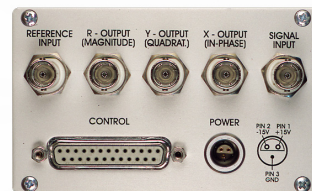

Datasheet

LIA-MVD-200-H

Dual Phase Lock-In-Amplifier Module

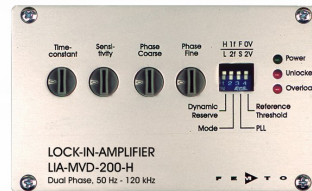


Features

- **BNC Connectors for Input and Output Signals**
- **Rugged Aluminium Housing**
- **Dual Phase Detection with X, Y and Magnitude Output**
- **Working Frequency 50 Hz ... 120 kHz, Digital Phase Shifter 0 ... 360°**
- **Parameter Control by local Switches and opto-isolated digital Inputs**
- **Optional Reference Oscillator Module available**

Applications

- **Spectroscopy**
- **Luminescence, Fluorescence, Phosphorescence Measurements**
- **Light Scattering Measurements**
- **Opto-electronical Quality Control**

Block Diagram

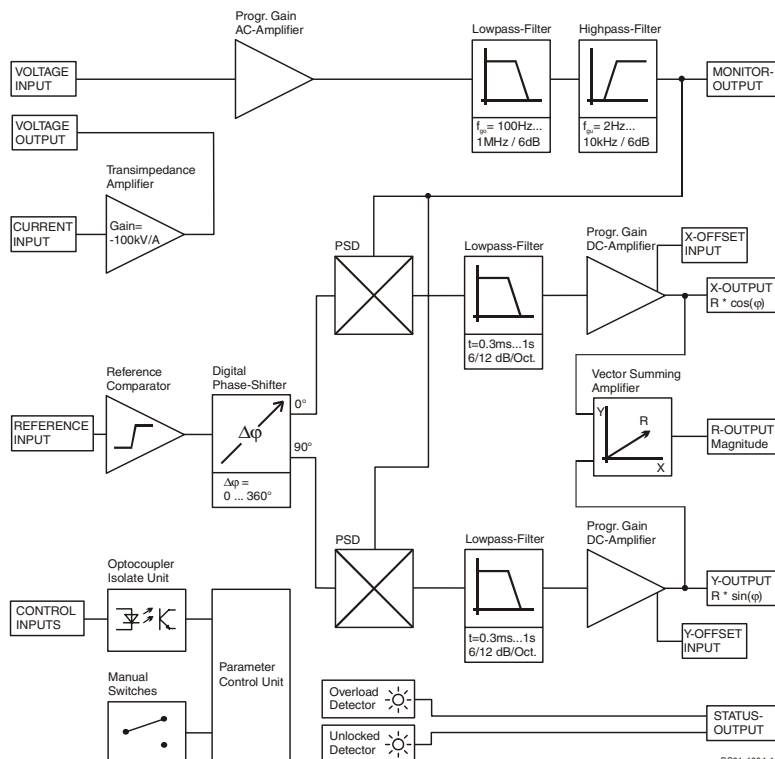

Dual Phase Lock-In-Amplifier Module

Specifications	<i>Test Conditions</i>	<i>V_s = ± 15 V, T_a = 25°C</i>			
Voltage Input	Voltage Input Characteristic	True Differential Instrumentation-Amplifier			
	Voltage Input Range	3 μV ... 1V in 1-3-10 steps (for Full Scale Output)			
	Voltage Input Coupling	AC			
	Voltage Input Impedance	1 MΩ // 4 pF			
	Voltage Input Noise	12 nV/√Hz			
	Voltage Input CMRR	110 dB @ 1 kHz, 100 dB @ 10 kHz			
	Voltage Input Gain Drift	100 ppm/K			
Current Input	Current Input Characteristic	Transimpedance-Amplifier, -100 kV/A (inverting)			
	Current Input Range	30 pA ... 10 μA in 1-3-10 steps (for Full Scale Output)			
	Current Input Noise	0.4 pA/√Hz			
	Current Input Source- Capacit.	10 pF – 500 pF (recommended)			
	Current Input Gain Error vs. Source Capacitance	Cs	f < 20 kHz	f = 50 kHz	f = 100 kHz
	10 pF	< 1 %	1 %	4 %	
	100 pF	< 1 %	1 %	3 %	
	500 pF	< 1 %	4 %	3 %	
Signal Filter (without optional Bandpass-Module)	Signal Filter Lowpass (-3 dB BW)	1 MHz, 100 kHz, 10 kHz, 1 kHz, 100 Hz; 6 dB/Oct. Selectable per jumper			
	Signal Filter Highpass (-3 dB BW)	2 Hz, 10 Hz, 100 Hz, 1 kHz, 10 kHz; 6 dB/Oct. selectable per jumper			
	Signal Filter Cutoff accuracy	± 20 %			
	Max. Dynamic Reserve	80 dB			
Signal Monitor Output	Signal Monitor Output Gain	1 ... 3333 (depends on Gain-Setting)			
	Signal Monitor Output Voltage	± 8 V max.			
	Signal Monitor Output Impedance	100 Ω			
	Signal Monitor Output Current	± 10 mA max.			
	Note	When using Current Input with low Input Ranges, the Monitor Output may be disabled by opening the soldering jumper at the Board (near JP1) to prevent from recoupling.			
Demodulator	Demodulator Dynamic Reserve	15 dB @ Ultra Stable Setting 35 dB @ Low Drift Setting 55 dB @ High Dynamic Setting			
	Reference Input Voltage Range	± 100 mV ... ± 5 V @ bip. Mode (0 V Comparator Threshold) - 5 V / +10 V @ TTL Mode (+2 V Comparator Threshold)			
	Reference Input Impedance	1 MΩ			
Reference Input	Reference Acquisition Time	max. 2 s @ Fast Setting max. 4 s @ Slow Setting			
	Phase Shifter Type	Digital, Working Frequency 50 Hz ... 120 kHz			
	Phase Shifter Range	0 ... + 360 °			
Phase Shifter	Phase Shifter Resolution	1.4 ° @ f < 60 kHz, 2.8 ° @ f > 60 kHz			
	Phase Shifter Drift	< 100 ppm/K			
	Phase Shifter Accuracy	< 0.3 °			
	Phase Shifter Orthogonality	< 0.1 °			
	Time Constants	Time Constant Range	300 μs ... 1 s in 1-3-10 steps		
	Time Const. Filter Characteristic	6 dB/Oct. or 12 dB/Oct. Switchable			

Dual Phase Lock-In-Amplifier Module

Specifications (continued) Output	<p>Output Channels X = In Phase, Y = Quadrature, R = Magnitude</p> <p>Output Voltage Range ± 10 V (@ 2 kΩ Load)</p> <p>Output Current ± 5 mA max.</p> <p>Output Impedance 50 Ω</p> <p>Output DC-Stability 5 ppm/K @ Ultra Stable Setting 50 ppm/K @ Low Drift Setting 500 ppm/K @ High Dynamic Setting</p> <p>Output Basic Accuracy 2 % (X and Y-Output) @ sinusoidal input signal 4 % (R-Output) @ sinusoidal input signal</p> <p>Output Voltage Offset Range ± 100 % Full Scale by ± 10 V Control Voltage</p> <p>Output Voltage Offset Control- Output Load Impedance > 2 kΩ</p>																															
Status Indicator LED	<p>Functions Amplifier Overload Status Reference PLL Unlocked Status</p>																															
Digital Control	<p>Control Input Voltage Low: - 0.8 V ... + 0.8 V, High: + 1.8 V ... + 12 V</p> <p>Control Input Current 0 mA @ 0V, 1.5 mA @ + 5 V, 4.5 mA @ + 12V typ.</p> <p>Digital Status Output Voltage Active: + 4.5 V typ., Non Active: 0 V typ.</p> <p>Digital Status Output Current 10 mA max.</p>																															
Power Supply	<p>Supply Voltage ± 15 Vdc ... ± 18 Vdc</p> <p>Supply Current - 60 mA, + 120 mA</p>																															
Case	<p>Material Aluminium anodized</p> <p>Dimension 64,4 x 105,0 x 223,0 mm (without BNC-connectors)</p> <p>Weight 1000 gr. (2.2 lbs)</p>																															
Temperature Range	<p>Storage Temperature - 40 ... + 100 °C</p> <p>Operating Temperature 0 ... + 60 °C</p>																															
Absolute Maximum Ratings	<p>Signal Input AC Voltage 50 Vpp</p> <p>Reference Input Voltage ± 15 V</p> <p>Control Input Voltage - 5 V, + 30 V</p> <p>Power Supply Voltage ± 22 V</p>																															
Switch Settings	<p>4 Dip Switch - Presettings</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Switch</th> <th>OFF</th> <th>ON</th> </tr> </thead> <tbody> <tr> <td>S1</td> <td>Low Drift & High Dynamic</td> <td>Ultra Stable & Low Drift</td> </tr> <tr> <td>S2</td> <td>1-f Mode</td> <td>2-f Mode</td> </tr> <tr> <td>S3</td> <td>Fast PLL-Locking</td> <td>Slow PLL-Locking</td> </tr> <tr> <td>S4</td> <td>Reference-Input-Threshold = 0 V</td> <td>Reference-Input-Threshold = +2 V</td> </tr> </tbody> </table> <p>Sensitivity Setting, Output DC-Gain Modes</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Mode</th> <th>DC-Gain</th> <th>Dyn. Reserve</th> <th>DC-Stability</th> </tr> </thead> <tbody> <tr> <td>Ultra Stable</td> <td>10</td> <td>Low</td> <td>High</td> </tr> <tr> <td>Low Drift</td> <td>100</td> <td>Medium</td> <td>Medium</td> </tr> <tr> <td>High Dynamic</td> <td>1000</td> <td>High</td> <td>Low</td> </tr> </tbody> </table> <p>If only low dynamic reserve is required, select the higher DC-Stability settings. Use Dip switch S1 to preselect either the two upper or the two lower DC-Gain modes, then select best mode by Sensitivity switch settings 0–7 or 8–F.</p>	Switch	OFF	ON	S1	Low Drift & High Dynamic	Ultra Stable & Low Drift	S2	1-f Mode	2-f Mode	S3	Fast PLL-Locking	Slow PLL-Locking	S4	Reference-Input-Threshold = 0 V	Reference-Input-Threshold = +2 V	Mode	DC-Gain	Dyn. Reserve	DC-Stability	Ultra Stable	10	Low	High	Low Drift	100	Medium	Medium	High Dynamic	1000	High	Low
Switch	OFF	ON																														
S1	Low Drift & High Dynamic	Ultra Stable & Low Drift																														
S2	1-f Mode	2-f Mode																														
S3	Fast PLL-Locking	Slow PLL-Locking																														
S4	Reference-Input-Threshold = 0 V	Reference-Input-Threshold = +2 V																														
Mode	DC-Gain	Dyn. Reserve	DC-Stability																													
Ultra Stable	10	Low	High																													
Low Drift	100	Medium	Medium																													
High Dynamic	1000	High	Low																													

Dual Phase Lock-In-Amplifier Module

Switch Settings (continued)

S1 = ON: Sensitivity Setting for Full Scale (= 10 V Output)

Ultra Stable Mode

Setting	Voltage	Current
0	1 V	10 μ A
1	300 mV	3 μ A
2	100 mV	1 μ A
3	30 mV	300 nA
4	10 mV	100 nA
5	3 mV	30 nA
6	1 mV	10 nA
7	300 μ V	3 nA

Low Drift Mode

Setting	Voltage	Current
8	100 mV	1 μ A
9	30 mV	300 nA
A	10 mV	100 nA
B	3 mV	30 nA
C	1 mV	10 nA
D	300 μ V	3 nA
E	100 μ V	1 nA
F	30 μ V	300 pA

S1 = OFF: Sensitivity Setting for Full Scale (= 10 V Output)

Low Drift Mode

Setting	Voltage	Current
0	100 mV	1 μ A
1	30 mV	300 nA
2	10 mV	100 nA
3	3 mV	30 nA
4	1 mV	10 nA
5	300 μ V	3 nA
6	100 μ V	1 nA
7	30 μ V	300 pA

High Dynamic Mode

Setting	Voltage	Current
8	10 mV	100 nA
9	3 mV	30 nA
A	1 mV	10 nA
B	300 μ V	3 nA
C	100 μ V	1 nA
D	30 μ V	300 pA
E	10 μ V	100 pA
F	3 μ V	30 pA


Time Constant Setting

6 dB/Oct. 12 dB/Oct. Time Constant

0	8	300 μ s
1	9	1 ms
2	A	3 ms
3	B	10 ms
4	C	30 ms
5	D	100 ms
6	E	300 ms
7	F	1 s

Phase Shift Setting

Phase shift is adjusted by 2 phase switches with 8 Bit resolution. Values 0 ... 255 (Hex 00 ... FF) correspond to phase shift setting 0 ... +360 $^{\circ}$. One step with switch marked "Coarse" changes phase shift by 22.5 $^{\circ}$. The "Fine"-switch changes phase shift by 1.4 $^{\circ}$ - steps:

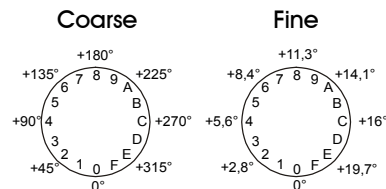

If Frequency Range $f > 70$ kHz or 2-f Mode is selected, the resolution of digital phase control changes to 2.8 $^{\circ}$ and the phase shift range doubles to 0 ... + 720 $^{\circ}$.

Dual Phase Lock-In-Amplifier Module

Internal Jumper Settings (jumpers are accessible when top of case is removed)

Input Signal Filter Setting

Set Cut-Off Frequency of Input Lowpass Filter with JP1 + JP2 (always same position) and Highpass Filter with JP3:

JP3	Highpass	JP1, JP2	Lowpass
	-3 dB Cut-Off		-3 dB Cut-Off
3 - 4	2 Hz	1 - 2	100 Hz
1 - 3	10 Hz	3 - 4	1 kHz
2 - 4	100 Hz	5 - 6	10 kHz
3 - 5	1 kHz	7 - 8	100 kHz
4 - 6	10 kHz	none	1 MHz *


* (At Sensitivity Settings 6,7 & E,F max. 200 kHz)

Frequency Range Selection

JP4	Frequency Range
1 - 2	f < 60 kHz
3 - 4 & 5 - 6	f > 60 kHz
7, 8	test pins, do not use

(if 2-f mode is used, position is always 1-2)

Internal Jumper Position Diagram (look at top of board when case is opened)

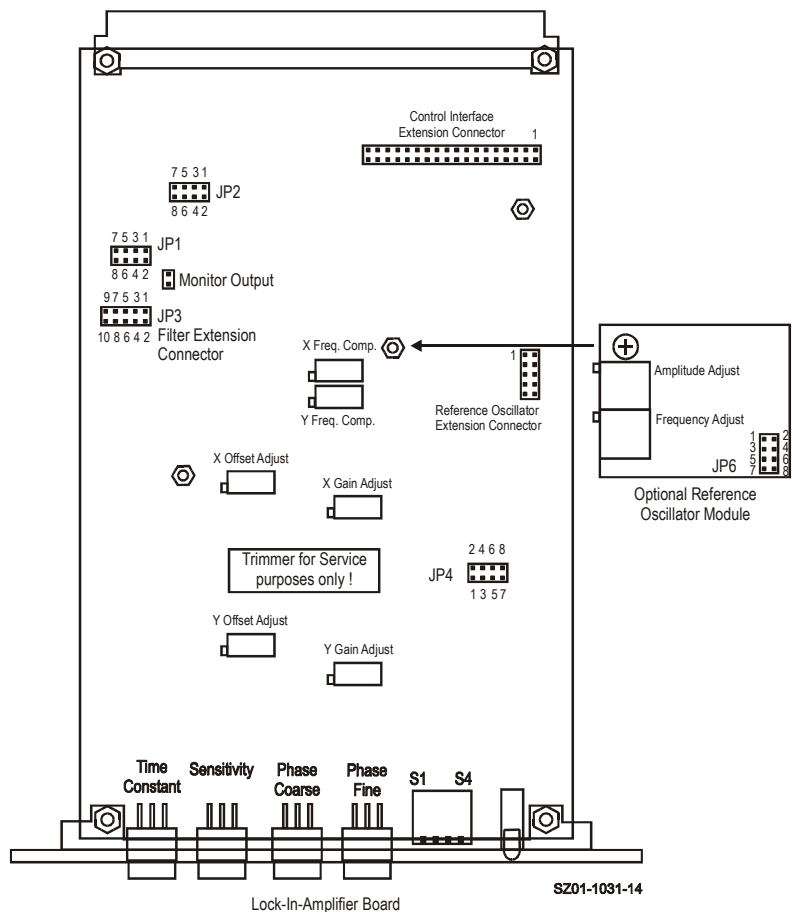


Dual Phase Lock-In-Amplifier Module

Internal Connector
(of build-in Lock-In Board)

Connector Type	Euro-Card DIN 41612 Connector, 64 pin male, (a+c)
Input	Pin C2: Voltage Input, Non Inverting, DC-Coupled Pin C3: Voltage Input, Non Inverting, AC-Coupled Pin C4: Voltage Input, Inverting, AC-Coupled Pin C5: Voltage Input, Inverting, DC-Coupled Pin C7: Current Input Pin C6: Current Amplifier Voltage Output Pin A2- A6: Input GND
Monitor Output	Pin C9: Monitor Output Pin A9: Monitor GND
Output	Pin A12: R-Signal Output Pin C14: X-Signal Output Pin A14: Y-Signal Output Pin C15: Output GND
Offset Input	Pin A10: X-Offset Input Pin A11: Y-Offset Input Pin A13: Offset GND
Status Output	Pin C10: Unlocked Status Output Pin C11: Overload Status Output Pin C17: Status Output GND (=Power Supply GND)
Power Supply	Pin A16+C16: Power Supply – 15V Pin A18+C18: Power Supply + 15V Pin A17+C17: Power Supply GND
Remote Control Inputs (Opto-Isolated)	Pin C19: Time Constant (TC0) Pin A19: Time Constant (TC1) Pin C20: Time Constant (TC2) Pin A20: Time Constant Slope (TCSL) Pin A22: Sensitivity (SEN0) Pin C21: Sensitivity (SEN1) Pin A21: Sensitivity (SEN2) Pin C22: Dynamic Mode (DYNO) Pin A28: Phase Shift (PH0) Pin C28: Phase Shift (PH1) Pin A27: Phase Shift (PH2) Pin C27: Phase Shift (PH3) Pin A26: Phase Shift (PH4) Pin C26: Phase Shift (PH5) Pin A25: Phase Shift (PH6) Pin C25: Phase Shift (PH7) Pin C24: Disable Local Switch Control Pin A23+A24: Remote Control GND (Common Optocoupler Cathode)
Reference Input	Pin A32: Reference Input Pin A31: Reference Input Ground
Reference Output (Connected only if optional Oscillator Module is installed)	Pin A30: Reference Output Pin A17: Refer. Output GND (=Power Supply GND) Pin A29: Reference Synchronization Input
Standard Control Interface (Connected only if optional Control Interface Module (future product) is installed)	Pin C29: Interface 0 Pin C30: Interface 1 Pin C31: Interface 2 Pin C32: Interface 3

Dual Phase Lock-In-Amplifier Module

External Connectors
(at backside, Standard
Configuration)

Signal Input	Factory set to BNC, isolated (single ended)
X-Output	BNC
Y-Output	BNC
R-Output	BNC
Reference Input	BNC
Power Supply	LEMO Series 1S, 3-pin fixed Socket Pin 1: + 15V Pin 2: - 15V Pin 3: GND
	
Control Port	Sub-D 25-pin, female, Qual. Class 2 Pin 1: +12V (Stabilized Power Supply Output) Pin 2: -12V (Stabilized Power Supply Output) Pin 3: AGND (Analog Ground) Pin 4: +5V (Stabilized Power Supply Output) Pin 5: X-Output Pin 6: Overload Status Output Pin 7: Unlocked Status Output Pin 8: Disable Local Switch Control Input Pin 9: DGND (Ground f. Digital Control Pin 8 - 25) Pin 10: Dynamic Mode (DYN0) Pin 11: Sensitivity (SEN0) Pin 12: Sensitivity (SEN1) Pin 13: Sensitivity (SEN2) Pin 14: Time Constant Slope (TCSL) Pin 15: Time Constant (TC0) Pin 16: Time Constant (TC1) Pin 17: Time Constant (TC2) Pin 18: Phase Shift (PH0) Pin 19: Phase Shift (PH1) Pin 20: Phase Shift (PH2) Pin 21: Phase Shift (PH3) Pin 22: Phase Shift (PH4) Pin 23: Phase Shift (PH5) Pin 24: Phase Shift (PH6) Pin 25: Phase Shift (PH7)

Connector Wiring Options

General

The BNC-connector configuration can be easily changed by setting electrical jumpers at the internal I/O-adapter card. Disconnect the power supply and open the case by loosening the two upper screws at the case front and rear side. Please pay attention to the ground connection at the backplane. Now open the case by lifting the top. The jumper options and functions are described in the following table.

Dual Phase Lock-In-Amplifier Module

Connector Wiring Options,
Jumpers on internal
Adapter Board

Input Connectors (JP1)	Input wiring	Jumper installed
	IN A = Voltage Input (Single Ended, AC)	" +V-IN → IN A" "GND → IN A/SHLD" " -V-IN → IN A/SHLD"
	IN A = Voltage Input (Differential, AC)	" +V-IN → IN A" " -V-IN → IN A/SHLD"
	IN A / IN B = Voltage Input (2 BNC Differential, AC) (OUT A cannot be used)	" +V-IN → IN A" "GND → IN A/SHLD" " -V-IN → IN B"
	IN A = Current Input (Single Ended)	"C-IN → IN A" "GND → IN A/SHLD" " -V-IN → C-OUT"
Output Connectors (JP2)	Output wiring	Jumper installed
	OUT A = X-Output	"X → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = X-Output	"X → OUT B"
	OUT A = Y-Output	"Y → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = Y-Output	"Y → OUT B"
	OUT C = Y-Output	"Y → OUT C"
	OUT A = R-Output	"R → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = R-Output	"R → OUT B"
	OUT C = R-Output	"R → OUT C"
	OUT B = Monitor Output	"MON → OUT B"
	OUT C = Monitor Output	"MON → OUT C"
	OUT B = Unlocked Output	"UNL → OUT B"
	OUT C = Unlocked Output	"UNL → OUT C"
	OUT B = Overload Output	"OVL → OUT B"
	OUT C = Overload Output	"OVL → OUT C"
	OUT C = Reference Output	"REF-OUT → OUT C"
Reference Connector (JP3)	Reference wiring	Jumper installed
(Reference Output only if optional Oscillator Module is installed)	REF = Reference Input	"REF-IN → REF" (2 Jumper)
	REF = Reference Output (Reference Output connected to Ref. Input)	"REF-OUT → REF-IN" (2 Jp.) "REF-IN → REF" (2 Jumper)
	REF = Refer. Sync. Input (use OUT C as Reference Output)	"REF-SYNC → REF" (2 Jp.)

Dual Phase Lock-In-Amplifier Module

Remote Control Operation

General

Remote Control Input Bits are opto-isolated and connected by logical OR to local switch setting. The 4 hexadecimal switches are 4 Bit-coded as shown in the following table:

Switch Code	MSB		LSB	
	Bit 3	Bit 2	Bit 1	Bit 0
0	Low	Low	Low	Low
1	Low	Low	Low	High
2	Low	Low	High	Low
3	Low	Low	High	High
4	Low	High	Low	Low
5	Low	High	Low	High
6	Low	High	High	Low
7	Low	High	High	High
8	High	Low	Low	Low
9	High	Low	Low	High
A	High	Low	High	Low
B	High	Low	High	High
C	High	High	Low	Low
D	High	High	Low	High
E	High	High	High	Low
F	High	High	High	High

For remote control a switch setting, set the local switch to "0" and select the wanted setting via the 4-Bit-code at the corresponding digital inputs.

Sensitivity Switch -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	SEN0	(Pin A22)
Bit 1	SEN1	(Pin C21)
Bit 2	SEN2	(Pin A21)
Bit 3	DYNO	(Pin C22)

Time Constant Switch -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	TC0	(Pin C19)
Bit 1	TC1	(Pin A19)
Bit 2	TC2	(Pin C20)
Bit 3	TCSL	(Pin A20)

Phase Switch Coarse -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	PH4	(Pin A26)
Bit 1	PH5	(Pin C26)
Bit 2	PH6	(Pin A25)
Bit 3	PH7	(Pin C25)

Phase Switch Fine -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	PH0	(Pin A28)
Bit 1	PH1	(Pin C28)
Bit 2	PH2	(Pin A27)
Bit 3	PH3	(Pin C27)


Remote Control Example

For example, to select a switch setting code "6", you have to connect a "High"- level signal to the corresponding control input pins Bit 1 & Bit 2. Mixed operation, e.g. local phase settings and remote controlled sensitivity setting, is also possible.


Dual Phase Lock-In-Amplifier Module

Dimensions

Top View

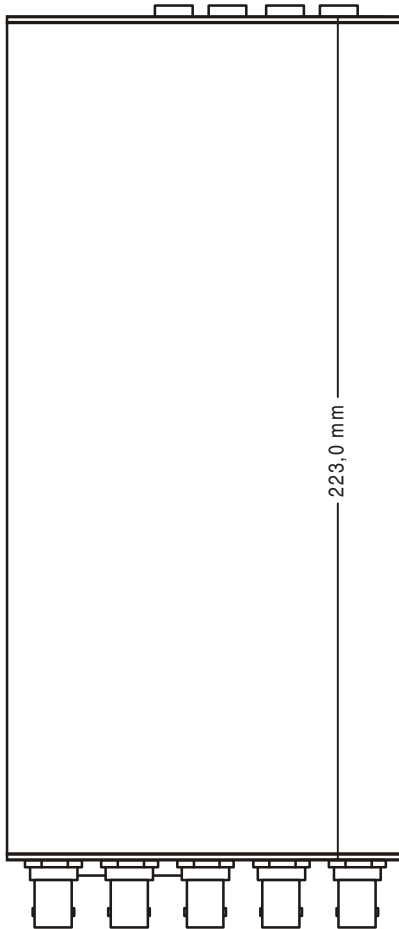

Front View

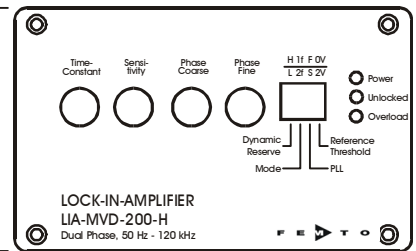


64,4 mm

105,0 mm

223,0 mm

Back View

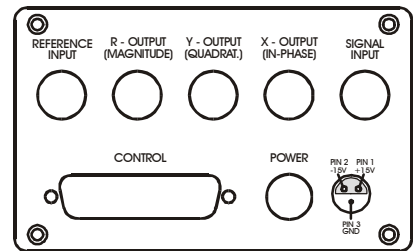

Case Material:
Al, natural anodised

DZ01-1074-10

Optional Extensions

Reference Oscillator Module

Model No.: SOM-1

- Frequency Range 5 Hz ... 130 kHz, User adjustable
- Output Voltage 0 ... 2 Vrms, User adjustable
- 100 ppm/K Amplitude Accuracy

Factory Set

1 kHz, 1 Vrms

FEMTO Messtechnik GmbH
Klosterstr. 64
D-10179 Berlin · Germany
Tel.: +49-(0)30-280 4711-0
Fax: +49-(0)30-280 4711-11
e-mail: info@femto.de
http://www.femto.de

Specifications are subject to change without notice. Information furnished herein is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or other rights granted by implication or otherwise under any patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.

© by FEMTO Messtechnik GmbH
Printed in Germany



Datasheet

LUCI-10

USB to D-Sub Control Interface for FEMTO Amplifiers




Features	<ul style="list-style-type: none"> • Compact Digital I/O Interface for USB Remote Control of FEMTO Amplifiers • Supports Opto-Isolation of Amplifier Signal Path from PC USB Port • 16 Digital Outputs, 3 Opto-Isolated Digital Inputs • Bus-Powered Operation • System Driver, Application Software and VI's for use with LabVIEW™ Included 																											
Applications	<ul style="list-style-type: none"> • Remote Control of FEMTO® Amplifiers and Photoreceivers Directly from a PC 																											
Block Diagram	<p style="text-align: right; font-size: small;">BS-LUCI-10_R1</p>																											
Hardware Specifications	<table border="0"> <tr> <td data-bbox="259 1617 470 1648">General Characteristics</td> <td data-bbox="535 1617 730 1648">Bus Interface</td> <td data-bbox="844 1617 1055 1648">USB 2.0 (full-speed)</td> </tr> <tr> <td></td> <td data-bbox="535 1648 730 1680">Digital I/O Channels</td> <td data-bbox="844 1648 1055 1680">16 output lines 3 opto-isolated input lines</td> </tr> <tr> <td></td> <td data-bbox="535 1701 617 1732">Supply</td> <td data-bbox="844 1701 1282 1764">PC USB port, + 5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)</td> </tr> <tr> <td></td> <td data-bbox="535 1764 649 1795">Connectors</td> <td data-bbox="844 1764 974 1795">USB type A D-Sub, 25 pin, male</td> </tr> <tr> <td></td> <td data-bbox="535 1816 600 1848">Cable</td> <td data-bbox="844 1816 1055 1848">AWG 28, length 1.8 m</td> </tr> <tr> <td data-bbox="259 1879 324 1911">Output</td> <td data-bbox="535 1879 730 1911">Number of Channels</td> <td data-bbox="844 1879 1347 1932">16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers</td> </tr> <tr> <td></td> <td data-bbox="535 1932 730 1963">Output Voltage Range</td> <td data-bbox="844 1932 1347 1984">LOW bit: 0 ... + 0.5 V (@ 0 ... 2 mA output current) HIGH bit: + 4 ... + 5.5 V (@ 0 ... 2 mA output current)</td> </tr> <tr> <td></td> <td data-bbox="535 1984 665 2016">Max. Current</td> <td data-bbox="844 1984 1006 2016">6 mA per channel</td> </tr> <tr> <td></td> <td data-bbox="535 2016 665 2047">Writing Rate</td> <td data-bbox="844 2016 1136 2047">max. 800 operations per second</td> </tr> </table>	General Characteristics	Bus Interface	USB 2.0 (full-speed)		Digital I/O Channels	16 output lines 3 opto-isolated input lines		Supply	PC USB port, + 5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)		Connectors	USB type A D-Sub, 25 pin, male		Cable	AWG 28, length 1.8 m	Output	Number of Channels	16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers		Output Voltage Range	LOW bit: 0 ... + 0.5 V (@ 0 ... 2 mA output current) HIGH bit: + 4 ... + 5.5 V (@ 0 ... 2 mA output current)		Max. Current	6 mA per channel		Writing Rate	max. 800 operations per second
General Characteristics	Bus Interface	USB 2.0 (full-speed)																										
	Digital I/O Channels	16 output lines 3 opto-isolated input lines																										
	Supply	PC USB port, + 5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)																										
	Connectors	USB type A D-Sub, 25 pin, male																										
	Cable	AWG 28, length 1.8 m																										
Output	Number of Channels	16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers																										
	Output Voltage Range	LOW bit: 0 ... + 0.5 V (@ 0 ... 2 mA output current) HIGH bit: + 4 ... + 5.5 V (@ 0 ... 2 mA output current)																										
	Max. Current	6 mA per channel																										
	Writing Rate	max. 800 operations per second																										

USB to D-Sub Control Interface for FEMTO Amplifiers

Software Specifications	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; padding: 5px;">Software (included on CD)</td> <td style="padding: 5px;"> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; padding: 5px;">Device Driver</td> <td style="padding: 5px;">dynamic link library (DLL) for integration in Microsoft Windows[®] operating system for use with C/C++, LabWindows[™] /CVI[™] or LabVIEW[™]</td> </tr> <tr> <td style="padding: 5px;">Application Software</td> <td style="padding: 5px;">GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Programs</td> <td style="padding: 5px;">sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Library</td> <td style="padding: 5px;">special VI toolkit for integration in LabVIEW development environment</td> </tr> </table> </td> </tr> </table> <p style="margin-top: 10px;">Note: A National Instruments LabVIEW[™] license is not included in this software package. For use of the GUI application programs the LabVIEW Run-Time Engine is required. If not detected on the host PC during the installation process the LabVIEW Run-Time Engine will be installed automatically from the CD.</p>	Software (included on CD)	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; padding: 5px;">Device Driver</td> <td style="padding: 5px;">dynamic link library (DLL) for integration in Microsoft Windows[®] operating system for use with C/C++, LabWindows[™] /CVI[™] or LabVIEW[™]</td> </tr> <tr> <td style="padding: 5px;">Application Software</td> <td style="padding: 5px;">GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Programs</td> <td style="padding: 5px;">sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Library</td> <td style="padding: 5px;">special VI toolkit for integration in LabVIEW development environment</td> </tr> </table>	Device Driver	dynamic link library (DLL) for integration in Microsoft Windows [®] operating system for use with C/C++, LabWindows [™] /CVI [™] or LabVIEW [™]	Application Software	GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects	LabVIEW Programs	sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)	LabVIEW Library	special VI toolkit for integration in LabVIEW development environment		
Software (included on CD)	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; padding: 5px;">Device Driver</td> <td style="padding: 5px;">dynamic link library (DLL) for integration in Microsoft Windows[®] operating system for use with C/C++, LabWindows[™] /CVI[™] or LabVIEW[™]</td> </tr> <tr> <td style="padding: 5px;">Application Software</td> <td style="padding: 5px;">GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Programs</td> <td style="padding: 5px;">sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)</td> </tr> <tr> <td style="padding: 5px;">LabVIEW Library</td> <td style="padding: 5px;">special VI toolkit for integration in LabVIEW development environment</td> </tr> </table>	Device Driver	dynamic link library (DLL) for integration in Microsoft Windows [®] operating system for use with C/C++, LabWindows [™] /CVI [™] or LabVIEW [™]	Application Software	GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects	LabVIEW Programs	sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)	LabVIEW Library	special VI toolkit for integration in LabVIEW development environment				
Device Driver	dynamic link library (DLL) for integration in Microsoft Windows [®] operating system for use with C/C++, LabWindows [™] /CVI [™] or LabVIEW [™]												
Application Software	GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects												
LabVIEW Programs	sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)												
LabVIEW Library	special VI toolkit for integration in LabVIEW development environment												
System Requirements	<table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%; padding: 5px;">Operating System</td> <td style="padding: 5px;">Microsoft Windows XP with Service Pack 2, or higher</td> </tr> <tr> <td style="padding: 5px;">Processor</td> <td style="padding: 5px;">Intel Pentium III or AMD Athlon, or better</td> </tr> <tr> <td style="padding: 5px;">System Memory</td> <td style="padding: 5px;">512 MB of RAM, or more</td> </tr> <tr> <td style="padding: 5px;">Hard Disk Space</td> <td style="padding: 5px;">about 200 MB</td> </tr> <tr> <td style="padding: 5px;">Interface Port</td> <td style="padding: 5px;">USB 1.1 or USB 2.0</td> </tr> <tr> <td style="padding: 5px;">Supported FEMTO Modules</td> <td style="padding: 5px;">any standard FEMTO amplifier or photoreceiver with 25 pin D-Sub socket, except model HLVA-100</td> </tr> </table>	Operating System	Microsoft Windows XP with Service Pack 2, or higher	Processor	Intel Pentium III or AMD Athlon, or better	System Memory	512 MB of RAM, or more	Hard Disk Space	about 200 MB	Interface Port	USB 1.1 or USB 2.0	Supported FEMTO Modules	any standard FEMTO amplifier or photoreceiver with 25 pin D-Sub socket, except model HLVA-100
Operating System	Microsoft Windows XP with Service Pack 2, or higher												
Processor	Intel Pentium III or AMD Athlon, or better												
System Memory	512 MB of RAM, or more												
Hard Disk Space	about 200 MB												
Interface Port	USB 1.1 or USB 2.0												
Supported FEMTO Modules	any standard FEMTO amplifier or photoreceiver with 25 pin D-Sub socket, except model HLVA-100												
Optional Requirements	<p>For development of own application programs an additional development environment like LabVIEW Version 8 (or higher) or C/C++ is required.</p>												
Legal Notice	<p>LabVIEW, CVI, National Instruments and NI are trademarks of National Instruments. Neither FEMTO Messtechnik GmbH, nor any software programs or other goods or services offered by FEMTO Messtechnik GmbH, are affiliated with, endorsed by, or sponsored by National Instruments.</p> <p>The mark LabWindows is used under a license from Microsoft Corporation.</p> <p>Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.</p> <p>FEMTO and the FEMTO logo are trademarks or registered trademarks of FEMTO Messtechnik GmbH in Germany, the U.S. and/or other countries.</p> <p>Product and company names mentioned may also be trademarks or trade names of their respective companies used here for identification purposes only.</p>												

USB to D-Sub Control Interface for FEMTO Amplifiers

Dimensions

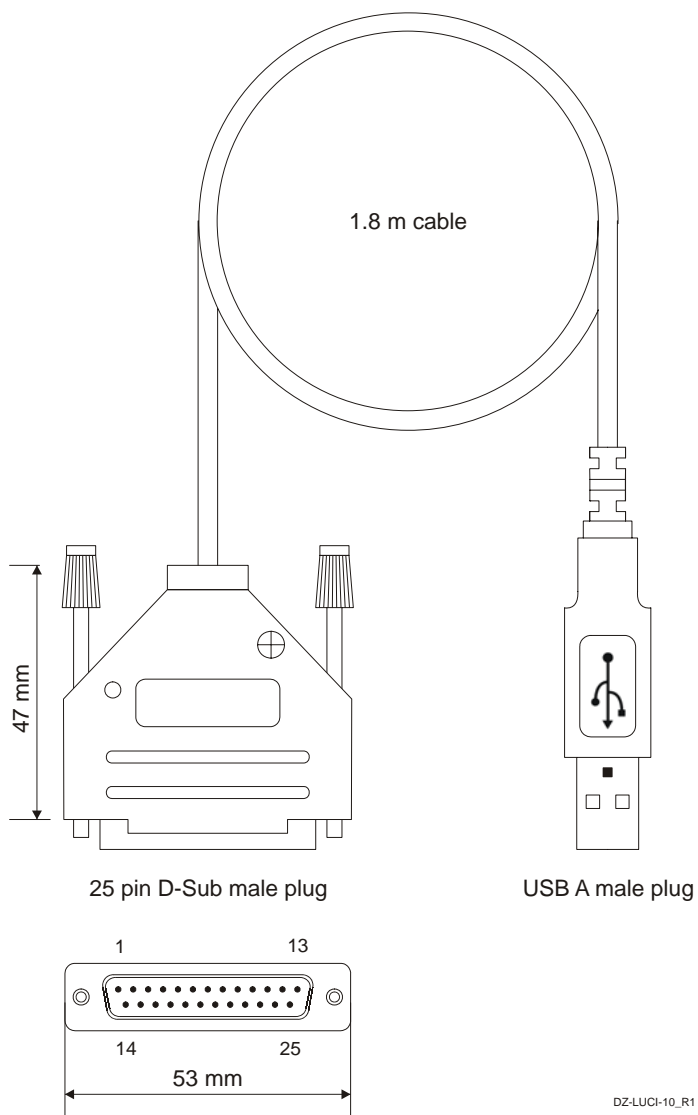

FEMTO Messtechnik GmbH
Paul-Lincke-Ufer 34
D-10999 Berlin · Germany
Tel.: +49 (0)30 – 4 46 93 86
Fax: +49 (0)30 – 4 46 93 88
e-mail: info@femto.de
<http://www.femto.de>

Specifications are subject to change without notice. Information furnished herein is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or other rights granted by implication or otherwise under any patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.
© by FEMTO Messtechnik GmbH
Printed in Germany