




Datasheet

LIA-BVD-150-L

Single-Board Dual Phase Lock-In-Amplifier

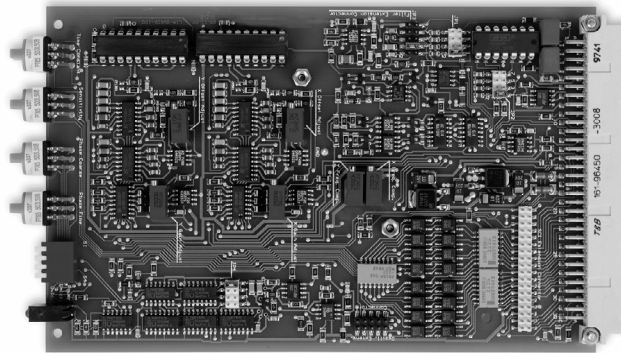

Picture shows Lock-in Amplifier card with optional Mounting Kit LIA- MK- 2 (to be ordered separately)


Features

- Dual Phase Detection with X, Y and Magnitude Output
- Working Frequency 5 Hz ... 10 kHz
- Digital Phase Shifter 0 ... 360°
- Current and Voltage Input
- Parameter Control by local Switches and opto-isolated digital Inputs
- Optional Mounting Kit and Reference Oscillator Modules available

Applications

- Spectroscopy
- Luminescence, Fluorescence, Phosphorescence Measurements
- Light Scattering Measurements
- Opto-electronical Quality Control
- Integration in Industrial and Scientific Measurement-Systems
- Multi-Channel-Systems at moderate Costs

Block Diagram

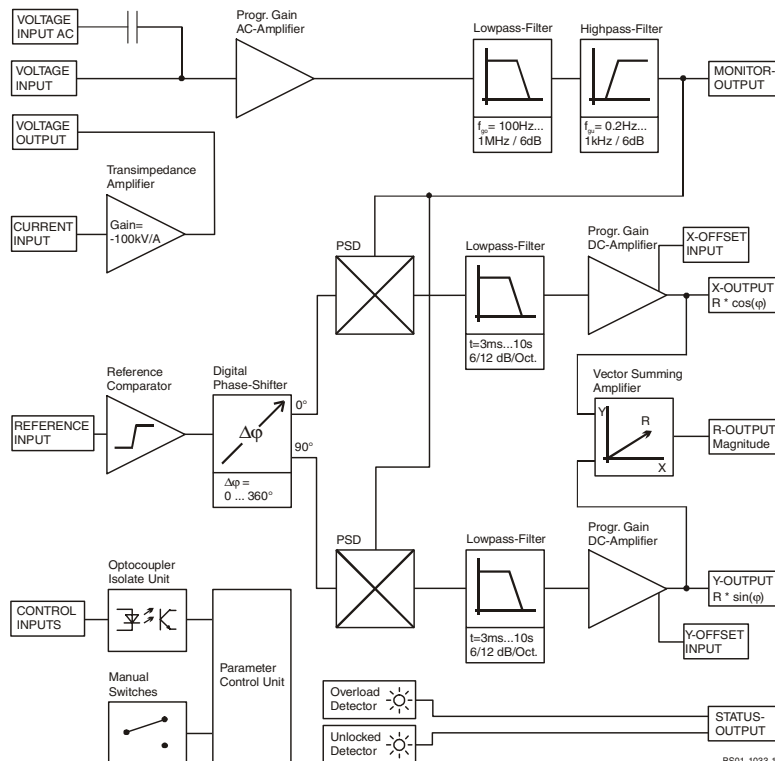

Single-Board Dual Phase Lock-In-Amplifier

Specifications	<i>Test Conditions</i>	<i>V_s = ± 15 V, T_a = 25°C</i>										
Voltage Input	Voltage Input Characteristic Voltage Input Range Voltage Input Coupling Voltage Input Impedance Voltage Input Noise Voltage Input CMRR Voltage Input Gain Drift	True Differential Instrumentation-Amplifier 3 μV ... 1V in 1-3-10 steps (for Full Scale Output) AC or DC (selectable at Connector) 1 MΩ // 4 pF 12 nV/√Hz 110 dB @ 1 kHz, 100 dB @ 10 kHz 100 ppm/K										
Current Input	Current Input Characteristic Current Input Range Current Input Noise Current Input Source- Capacit. Current Input Gain Error vs. Source Capacitance	Transimpedance-Amplifier, -100 kV/A (inverting) 30 pA ... 10 μA in 1-3-10 steps (for Full Scale Output) 0.4 pA/√Hz 10 pF – 500 pF (recommended) <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%; text-align: left;">Cs</td> <td style="width: 50%; text-align: left;">f < 10 kHz</td> </tr> <tr> <td colspan="2" style="border-top: 1px solid black;"></td> </tr> <tr> <td>10 pF</td> <td>< 1 %</td> </tr> <tr> <td>100 pF</td> <td>< 1 %</td> </tr> <tr> <td>1 nF</td> <td>< 2 %</td> </tr> </table>	Cs	f < 10 kHz			10 pF	< 1 %	100 pF	< 1 %	1 nF	< 2 %
Cs	f < 10 kHz											
10 pF	< 1 %											
100 pF	< 1 %											
1 nF	< 2 %											
Signal Filter	Signal Filter Lowpass (-3 dB BW) Signal Filter Highpass (-3 dB BW) Signal Filter Cutoff accuracy Max. Dynamic Reserve	1 MHz *, 100 kHz, 10 kHz, 1 kHz, 100 Hz; 6 dB/Oct. Selectable per jumper 0.2 Hz, 1 Hz, 10 Hz, 100 Hz, 1 kHz; 6 dB/Oct. selectable per jumper ± 20 % 80 dB										
Signal Monitor Output	Signal Monitor Output Gain Signal Monitor Output Voltage Signal Monitor Output Impedance Signal Monitor Output Current Note	1 ... 3333 (depends on Gain-Setting) ± 8 V max. 100 Ω ± 10 mA max. When using Current Input with low Input Ranges, the Monitor Output may be disabled by opening the soldering jumper at the Board (near JP1) to prevent from recoupling.										
Demodulator	Demodulator Dynamic Reserve	15 dB @ Ultra Stable Setting 35 dB @ Low Drift Setting 55 dB @ High Dynamic Setting										
Reference Input	Reference Input Voltage Range Reference Input Impedance Reference Acquisition Time	± 100 mV ... ± 5 V @ bip. Mode (0 V Comparator Threshold) - 5 V / +10 V @ TTL Mode (+2 V Comparator Threshold) 1 MΩ max. 2 s @ Fast Setting max. 4 s @ Slow Setting										
Phase Shifter	Phase Shifter Type Phase Shifter Range Phase Shifter Resolution Phase Shifter Drift Phase Shifter Accuracy Phase Shifter Orthogonality	Digital, Working Frequency 5 Hz ... 10 kHz 0 ... + 360 ° 1.4 ° < 100 ppm/K < 0.3 ° < 0.1 °										
Time Constants	Time Constant Range Time Const. Filter Characteristic	3 ms ... 10 s in 1-3-10 steps 6 dB/Oct. or 12 dB/Oct. switchable										

Single-Board Dual Phase Lock-In-Amplifier

Specifications (continued) Output	Output Channels Output Voltage Range Output Current Output Impedance Output DC-Stability Output Basic Accuracy Output Voltage Offset Range Output Voltage Offset Control-Voltage Impedance	X = In Phase, Y = Quadrature, R = Magnitude ± 10 V (@ 2 kΩ Load) ± 5 mA max. 50 Ω 5 ppm/K @ Ultra Stable Setting 50 ppm/K @ Low Drift Setting 500 ppm/K @ High Dynamic Setting 2 % (X and Y-Output) @ sinusoidal input signal 4 % (R-Output) @ sinusoidal input signal ± 100 % Full Scale by ± 10 V Control Voltage > 2 kΩ																																			
Status Indicator LED	Functions	Amplifier Overload Status Reference PLL Unlocked Status																																			
Digital Control	Control Input Voltage Control Input Current Digital Status Output Voltage Digital Status Output Current	Low: - 0.8 V ... + 0.8 V, High: + 1.8 V ... + 12 V 0 mA @ 0V, 1.5 mA @ + 5 V, 4.5 mA @ + 12V typ. Active: + 4.5 V typ., Non Active: 0 V typ. 10 mA max.																																			
Power Supply	Supply Voltage Supply Current	± 15 Vdc ... ± 18 Vdc - 60 mA, + 100 mA																																			
Case	Board Weight	19" Euro-Card, (100 mm x 160 mm Board) 100 gr. (0.22 lbs)																																			
Temperature Range	Storage Temperature Operating Temperature	- 40 ... + 100 °C 0 ... + 60 °C																																			
Absolute Maximum Ratings	Signal Input AC Voltage Signal Input DC Voltage Reference Input Voltage Control Input Voltage Power Supply Voltage	50 Vpp ± 70 V ± 15 V - 5 V, + 15 V ± 22 V																																			
Switch Settings	4 Dip Switch - Presettings	<table style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 10%;"></th> <th style="width: 40%; border-bottom: 1px solid black;">Switch OFF</th> <th style="width: 50%; border-bottom: 1px solid black;">ON</th> </tr> </thead> <tbody> <tr> <td>S1</td> <td>Low Drift & High Dynamic</td> <td>Ultra Stable & Low Drift</td> </tr> <tr> <td>S2</td> <td>1-f Mode</td> <td>2-f Mode</td> </tr> <tr> <td>S3</td> <td>Fast PLL-Locking</td> <td>Slow PLL-Locking</td> </tr> <tr> <td>S4</td> <td>Reference-Input-Threshold = 0 V</td> <td>Reference-Input-Threshold = +2 V</td> </tr> </tbody> </table> Sensitivity Setting, Output DC-Gain Modes <table style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 20%;"></th> <th colspan="3" style="text-align: center; border-bottom: 1px solid black;">3 Output DC-Gain Modes are selectable:</th> </tr> <tr> <th style="border-bottom: 1px solid black;">Mode</th> <th style="border-bottom: 1px solid black;">DC-Gain</th> <th style="border-bottom: 1px solid black;">Dyn. Reserve</th> <th style="border-bottom: 1px solid black;">DC-Stability</th> </tr> </thead> <tbody> <tr> <td>Ultra Stable</td> <td>10</td> <td>Low</td> <td>High</td> </tr> <tr> <td>Low Drift</td> <td>100</td> <td>Medium</td> <td>Medium</td> </tr> <tr> <td>High Dynamic</td> <td>1000</td> <td>High</td> <td>Low</td> </tr> </tbody> </table> <p style="font-size: small; margin-top: 10px;">If only low dynamic reserve is required, select the higher DC-Stability settings. Use Dip switch S1 to preselect either the two upper or the two lower DC-Gain modes, then select best mode by Sensitivity switch settings 0-7 or 8-F.</p>		Switch OFF	ON	S1	Low Drift & High Dynamic	Ultra Stable & Low Drift	S2	1-f Mode	2-f Mode	S3	Fast PLL-Locking	Slow PLL-Locking	S4	Reference-Input-Threshold = 0 V	Reference-Input-Threshold = +2 V		3 Output DC-Gain Modes are selectable:			Mode	DC-Gain	Dyn. Reserve	DC-Stability	Ultra Stable	10	Low	High	Low Drift	100	Medium	Medium	High Dynamic	1000	High	Low
	Switch OFF	ON																																			
S1	Low Drift & High Dynamic	Ultra Stable & Low Drift																																			
S2	1-f Mode	2-f Mode																																			
S3	Fast PLL-Locking	Slow PLL-Locking																																			
S4	Reference-Input-Threshold = 0 V	Reference-Input-Threshold = +2 V																																			
	3 Output DC-Gain Modes are selectable:																																				
Mode	DC-Gain	Dyn. Reserve	DC-Stability																																		
Ultra Stable	10	Low	High																																		
Low Drift	100	Medium	Medium																																		
High Dynamic	1000	High	Low																																		

Single-Board Dual Phase Lock-In-Amplifier

Switch Settings (continued)

S1 = ON: Sensitivity Setting
for Full Scale (= 10 V Output)

Ultra Stable Mode
Setting Voltage Current

Low Drift Mode
Setting Voltage Current

0	1 V	10 μ A	8	100 mV	1 μ A
1	300 mV	3 μ A	9	30 mV	300 nA
2	100 mV	1 μ A	A	10 mV	100 nA
3	30 mV	300 nA	B	3 mV	30 nA
4	10 mV	100 nA	C	1 mV	10 nA
5	3 mV	30 nA	D	300 μ V	3 nA
6	1 mV	10 nA	E	100 μ V	1 nA
7	300 μ V	3 nA	F	30 μ V	300 pA

S1 = OFF: Sensitivity Setting
for Full Scale (= 10 V Output)

Low Drift Mode
Setting Voltage Current

High Dynamic Mode
Setting Voltage Current

0	100 mV	1 μ A	8	10 mV	100 nA
1	30 mV	300 nA	9	3 mV	30 nA
2	10 mV	100 nA	A	1 mV	10 nA
3	3 mV	30 nA	B	300 μ V	3 nA
4	1 mV	10 nA	C	100 μ V	1 nA
5	300 μ V	3 nA	D	30 μ V	300 pA
6	100 μ V	1 nA	E	10 μ V	100 pA
7	30 μ V	300 pA	F	3 μ V	30 pA


Time Constant Setting

6 dB/Oct. 12 dB/Oct. Time Constant

0	8	3 ms
1	9	10 ms
2	A	30 ms
3	B	100 ms
4	C	300 ms
5	D	1 s
6	E	3 s
7	F	10 s

Phase Shift Setting

Phase shift is adjusted by 2 phase switches with 8 Bit resolution. Values 0 ... 255 (Hex 00 ... FF) correspond to phase shift setting 0 ... +360°. One step with switch marked "Coarse" changes phase shift by 22.5°. The "Fine"-switch changes phase shift by 1.4° - steps:

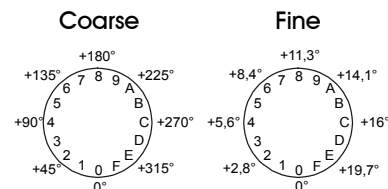

If 2-f Mode is selected, the resolution of digital phase control changes to 2.8° and the phase shift range doubles to 0 ... + 720°.

Jumper Settings


Input Signal Filter

Set Cut-Off Frequency of Input Lowpass Filter

Single-Board Dual Phase Lock-In-Amplifier

Setting	with JP1 + JP2 (always same position) and Highpass Filter with JP3:			
	Highpass		Lowpass	
	JP3	-3 dB Cut-Off	JP1, JP2	-3 dB Cut-Off
	3 - 4	0.2 Hz	1 - 2	100 Hz
	1 - 3	1 Hz	3 - 4	1 kHz
	2 - 4	10 Hz	5 - 6	10 kHz
	3 - 5	100 Hz	7 - 8	100 kHz
	4 - 6	1 kHz	none	1 MHz
Frequency Range Selection	JP4	Frequency Range		
	1 - 2	normal operation		
	3, 4, 5, 6, 7, 8	test pins, do not use		

Jumper Position Diagram

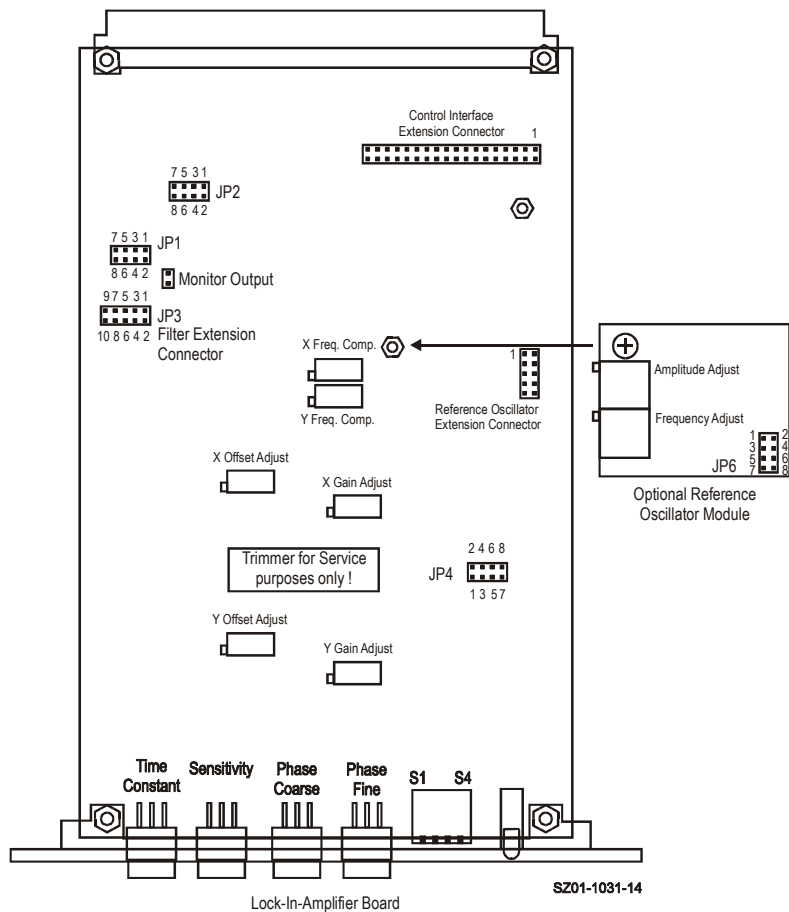

Single-Board Dual Phase Lock-In-Amplifier

Connector	Connector Type	Euro-Card DIN 41612 Connector, 64 pin male, (a+c)	
	Input	Pin C2:	Voltage Input, Non Inverting, DC-Coupled
		Pin C3:	Voltage Input, Non Inverting, AC-Coupled
		Pin C4:	Voltage Input, Inverting, AC-Coupled
		Pin C5:	Voltage Input, Inverting, DC-Coupled
		Pin C7:	Current Input
		Pin C6:	Current Amplifier Voltage Output
		Pin A2- A6:	Input GND
	Monitor Output	Pin C9:	Monitor Output
		Pin A9:	Monitor GND
	Output	Pin A12:	R-Signal Output
		Pin C14:	X-Signal Output
		Pin A14:	Y-Signal Output
		Pin C15:	Output GND
	Offset Input	Pin A10:	X-Offset Input
		Pin A11:	Y-Offset Input
		Pin A13:	Offset GND
	Status Output	Pin C10:	Unlocked Status Output
		Pin C11:	Overload Status Output
		Pin C17:	Status Output GND (=Power Supply GND)
	Power Supply	Pin A16+C16:	Power Supply – 15V
		Pin A18+C18:	Power Supply + 15V
		Pin A17+C17:	Power Supply GND
	Remote Control Inputs (Opto-Isolated)	Pin C19:	Time Constant (TC0)
		Pin A19:	Time Constant (TC1)
		Pin C20:	Time Constant (TC2)
		Pin A20:	Time Constant Slope (TCSL)
		Pin A22:	Sensitivity (SEN0)
		Pin C21:	Sensitivity (SEN1)
		Pin A21:	Sensitivity (SEN2)
		Pin C22:	Dynamic Mode (DYNO)
		Pin A28:	Phase Shift (PH0)
		Pin C28:	Phase Shift (PH1)
		Pin A27:	Phase Shift (PH2)
		Pin C27:	Phase Shift (PH3)
		Pin A26:	Phase Shift (PH4)
		Pin C26:	Phase Shift (PH5)
		Pin A25:	Phase Shift (PH6)
		Pin C25:	Phase Shift (PH7)
		Pin C24:	Disable Local Switch Control
		Pin A23+A24:	Remote Control GND (Common Optocoupler Cathode)
	Reference Input	Pin A32:	Reference Input
		Pin A31:	Reference Input Ground
	Reference Output (Connected only if optional Oscillator Module is installed)	Pin A30:	Reference Output
		Pin A17:	Refer. Output GND (=Power Supply GND)
		Pin A29:	Reference Synchronization Input
	Standard Control Interface (Connected only if optional Control Interface Module (future product) is installed)	Pin C29:	Interface 0
		Pin C30:	Interface 1
		Pin C31:	Interface 2
		Pin C32:	Interface 3

Single-Board Dual Phase Lock-In-Amplifier

Remote Control Operation

General

Remote Control Input Bits are opto-isolated and connected by logical OR to local switch setting.
The 4 hexadecimal switches are 4 Bit-coded as shown in the following table:

Switch Code	MSB			LSB
	Bit 3	Bit 2	Bit 1	Bit 0
0	Low	Low	Low	Low
1	Low	Low	Low	High
2	Low	Low	High	Low
3	Low	Low	High	High
4	Low	High	Low	Low
5	Low	High	Low	High
6	Low	High	High	Low
7	Low	High	High	High
8	High	Low	Low	Low
9	High	Low	Low	High
A	High	Low	High	Low
B	High	Low	High	High
C	High	High	Low	Low
D	High	High	Low	High
E	High	High	High	Low
F	High	High	High	High

For remote control a switch setting, set the local switch to "0" and select the wanted setting via the 4-Bit-code at the corresponding digital inputs.

Disable Local Switches

By forcing Input Bit "Disable Local Switch Control" (Pin C24) to "High", the LIA is set to exclusively remote control operation and the manual switches are out of function.

Sensitivity Switch -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	SEN0	(Pin A22)
Bit 1	SEN1	(Pin C21)
Bit 2	SEN2	(Pin A21)
Bit 3	DYNO	(Pin C22)

Time Constant Switch -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	TC0	(Pin C19)
Bit 1	TC1	(Pin A19)
Bit 2	TC2	(Pin C20)
Bit 3	TCSL	(Pin A20)

Phase Switch Coarse -
Corresponding Inputs

Bit	Corresponding Control Port Input	
Bit 0	PH4	(Pin A26)
Bit 1	PH5	(Pin C26)
Bit 2	PH6	(Pin A25)
Bit 3	PH7	(Pin C25)

Phase Switch Fine -
Corresponding Inputs


Bit	Corresponding Control Port Input	
Bit 0	PH0	(Pin A28)
Bit 1	PH1	(Pin C28)
Bit 2	PH2	(Pin A27)
Bit 3	PH3	(Pin C27)

Single-Board Dual Phase Lock-In-Amplifier

Remote Control Example

For example, to select a switch setting code "6", you have to connect a "High"- level signal to the corresponding control input pins Bit 1 & Bit 2. Mixed operation, e.g. local phase settings and remote controlled sensitivity setting, is also possible when "Disable Local Switch Control" (Pin C24) is not active ("Low" or just not connected).

Dimensions

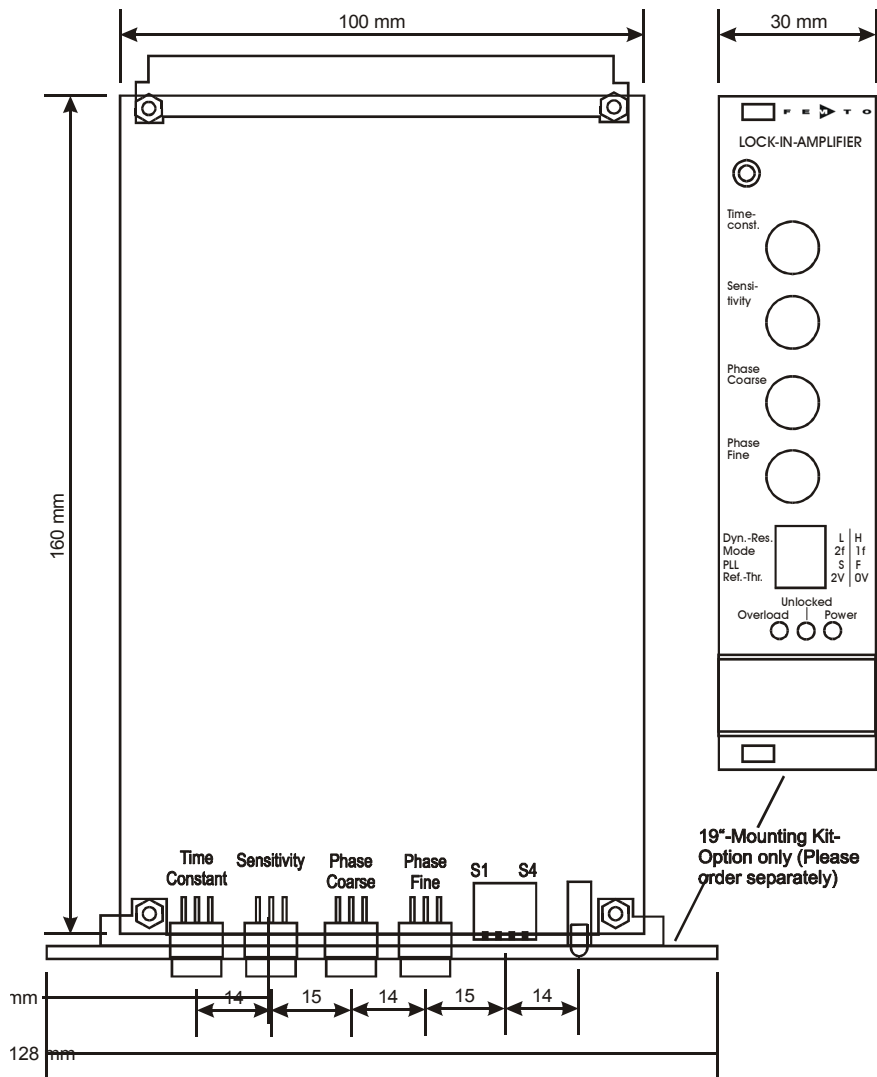

DZ01-1031-12

Single-Board Dual Phase Lock-In-Amplifier

Optional Extensions	<table border="0"> <tr> <td data-bbox="560 517 820 546">Mounting Kit</td> <td data-bbox="876 517 1190 602"> Model No.: MK-LIA-2 - 19" – Frontpanel, printed - EMI – shielding Board-Backplane </td> </tr> <tr> <td data-bbox="560 636 820 665">Reference Oscillator Module</td> <td data-bbox="876 636 1350 748"> Model No.: SOM-1 - Frequency Range 5 Hz ... 130 kHz, User adjustable - Output Voltage 0 ... 2 Vrms, User adjustable - 100 ppm/K Amplitude Accuracy </td> </tr> </table>	Mounting Kit	Model No.: MK-LIA-2 - 19" – Frontpanel, printed - EMI – shielding Board-Backplane	Reference Oscillator Module	Model No.: SOM-1 - Frequency Range 5 Hz ... 130 kHz, User adjustable - Output Voltage 0 ... 2 Vrms, User adjustable - 100 ppm/K Amplitude Accuracy
Mounting Kit	Model No.: MK-LIA-2 - 19" – Frontpanel, printed - EMI – shielding Board-Backplane				
Reference Oscillator Module	Model No.: SOM-1 - Frequency Range 5 Hz ... 130 kHz, User adjustable - Output Voltage 0 ... 2 Vrms, User adjustable - 100 ppm/K Amplitude Accuracy				

FEMTO Messtechnik GmbH
 Klosterstr. 64
 D-10179 Berlin • Germany
 Tel.: +49-(0)30-280 4711-0
 Fax: +49-(0)30-280 4711-11
 e-mail: info@femto.de
<http://www.femto.de>

Specifications are subject to change without notice. Information furnished herein is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or other rights granted by implication or otherwise under any patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.
 © by FEMTO Messtechnik GmbH
 Printed in Germany



Datasheet

LUCI-10

**USB to D-Sub Control Interface
for FEMTO Amplifiers**



<p>Features</p>	<ul style="list-style-type: none"> • Compact digital I/O interface for USB remote control of FEMTO amplifiers • Supports opto-isolation of amplifier signal path from PC USB port • 16 digital outputs, 3 opto-isolated digital inputs • Bus-powered operation • System driver, application software and VI's for use with LabVIEW™ included 				
<p>Applications</p>	<ul style="list-style-type: none"> • Remote control of FEMTO® amplifiers and photoreceivers directly from a PC 				
<p>Block Diagram</p>	<p style="text-align: right; font-size: small;">BS-LUCI-10_R1</p>				
<p>Hardware Specifications</p>	<table border="0"> <tr> <td style="vertical-align: top;"> <p>General Characteristics</p> </td> <td> <p>Bus interface: USB 2.0 (full-speed)</p> <p>Digital I/O channels: 16 output lines 3 opto-isolated input lines</p> <p>Supply: PC USB port, +5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)</p> <p>Connectors: USB type A D-Sub, 25 pin, male</p> <p>Cable: AWG 28, length 1.8 m</p> </td> </tr> <tr> <td style="vertical-align: top;"> <p>Output</p> </td> <td> <p>Number of channels: 16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers</p> <p>Output voltage range: LOW bit: 0 ... +0.5 V (@ 0 ... 2 mA output current) HIGH bit: +4 ... +5.5 V (@ 0 ... 2 mA output current)</p> <p>Max. current: 6 mA per channel</p> <p>Writing rate: max. 600 operations per second</p> </td> </tr> </table>	<p>General Characteristics</p>	<p>Bus interface: USB 2.0 (full-speed)</p> <p>Digital I/O channels: 16 output lines 3 opto-isolated input lines</p> <p>Supply: PC USB port, +5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)</p> <p>Connectors: USB type A D-Sub, 25 pin, male</p> <p>Cable: AWG 28, length 1.8 m</p>	<p>Output</p>	<p>Number of channels: 16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers</p> <p>Output voltage range: LOW bit: 0 ... +0.5 V (@ 0 ... 2 mA output current) HIGH bit: +4 ... +5.5 V (@ 0 ... 2 mA output current)</p> <p>Max. current: 6 mA per channel</p> <p>Writing rate: max. 600 operations per second</p>
<p>General Characteristics</p>	<p>Bus interface: USB 2.0 (full-speed)</p> <p>Digital I/O channels: 16 output lines 3 opto-isolated input lines</p> <p>Supply: PC USB port, +5 V, typ. 100 mA, bus-powered (no auxiliary power supply required)</p> <p>Connectors: USB type A D-Sub, 25 pin, male</p> <p>Cable: AWG 28, length 1.8 m</p>				
<p>Output</p>	<p>Number of channels: 16 output lines, supporting opto-isolation inside FEMTO amplifiers and photoreceivers</p> <p>Output voltage range: LOW bit: 0 ... +0.5 V (@ 0 ... 2 mA output current) HIGH bit: +4 ... +5.5 V (@ 0 ... 2 mA output current)</p> <p>Max. current: 6 mA per channel</p> <p>Writing rate: max. 600 operations per second</p>				

**USB to D-Sub Control Interface
for FEMTO Amplifiers**

<p>Input</p>	<p>Number of channels 3 opto-isolated input lines Input voltage range LOW bit: -20 ... +1.5 V HIGH bit: +3 ... +20 V Switching current 1 mA typ. @ 5 V Reading rate max. 300 operations per second</p>
<p>Power Supply</p>	<p>USB port, bus powered +4.5 ... +5.5 V DC Active current max. 200 mA / typ. 100 mA Suspend current <0.5 mA (standby mode of Windows®)</p>
<p>Case</p>	<p>D-Sub case metal hood (EMI/RFI shielding), with jack screws Weight 130 g (0.3 lb.) Material zinc die-cast, nickel plated</p>
<p>Temperature Range</p>	<p>Storage temperature -40 ... +100 °C Operating temperature 0 ... +50 °C</p>
<p>Absolute Maximum Ratings</p>	<p>Max. voltage at input ±30 V Max. short-circuit output current ±20 mA per channel, 200 mA total Max. isolation voltage ±60 V (input ground to output ground)</p>
<p>Connectors</p>	<p>Device port D-Sub, 25 pin, male Pin 1: NC Pin 2: NC Pin 3: GND (IN) Pin 4: NC Pin 5: Digital IN Pin 6: Digital IN Pin 7: Digital IN Pin 8: NC Pin 9: GND (OUT) Pin 10: Digital OUT Low Byte, LSB Pin 11: Digital OUT Low Byte Pin 12: Digital OUT Low Byte Pin 13: Digital OUT Low Byte Pin 14: Digital OUT Low Byte Pin 15: Digital OUT Low Byte Pin 16: Digital OUT Low Byte Pin 17: Digital OUT Low Byte, MSB Pin 18: Digital OUT High Byte, LSB Pin 19: Digital OUT High Byte Pin 20: Digital OUT High Byte Pin 21: Digital OUT High Byte Pin 22: Digital OUT High Byte Pin 23: Digital OUT High Byte Pin 24: Digital OUT High Byte Pin 25: Digital OUT High Byte, MSB</p> <p>PC port USB type A</p>

USB to D-Sub Control Interface for FEMTO Amplifiers

Software Specifications

Software
(included on CD)

Device driver	dynamic link library (DLL) for integration in Microsoft Windows® 32 bit & 64 bit operating system for use with C/C++, LabWindows™ /CVI™ or LabVIEW™
Application software	GUI (graphical user interface) programs for simple remote control of FEMTO amplifiers and photoreceivers provided as executable programs and LabVIEW projects
LabVIEW programs	sample programs to control and test the LUCI-10 hardware (including front panel and block diagram)
LabVIEW library	special VI toolkit for integration in LabVIEW 32 bit & 64 bit development environment

Note: A National Instruments LabVIEW™ license is not included in this software package. For use of the GUI application programs the LabVIEW Run-Time Engine is required. If not detected on the host PC during the installation process the LabVIEW Run-Time Engine will be installed automatically from the CD.

System Requirements

Operating system	Microsoft Windows XP with Service Pack 3, or higher
Processor	Intel Pentium III or AMD Athlon, or better
System memory	1 GB of RAM, or more
Hard disk space	about 5 GB
Interface port	USB 1.1 or USB 2.0
Supported FEMTO modules	any standard FEMTO amplifier or photoreceiver with 25 pin D-Sub socket, except model HLVA-100

Optional Requirements

For development of own application programs an additional development environment like LabVIEW Version 2012 (or higher) or C/C++ is required.

Legal Notice

LabVIEW, CVI, National Instruments and NI are trademarks of National Instruments. Neither FEMTO Messtechnik GmbH, nor any software programs or other goods or services offered by FEMTO Messtechnik GmbH, are affiliated with, endorsed by, or sponsored by National Instruments.


The mark LabWindows is used under a license from Microsoft Corporation. Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

FEMTO and the FEMTO logo are trademarks or registered trademarks of FEMTO Messtechnik GmbH in Germany, the U.S. and/or other countries.

Product and company names mentioned may also be trademarks or trade names of their respective companies used here for identification purposes only.

USB to D-Sub Control Interface for FEMTO Amplifiers

Dimensions

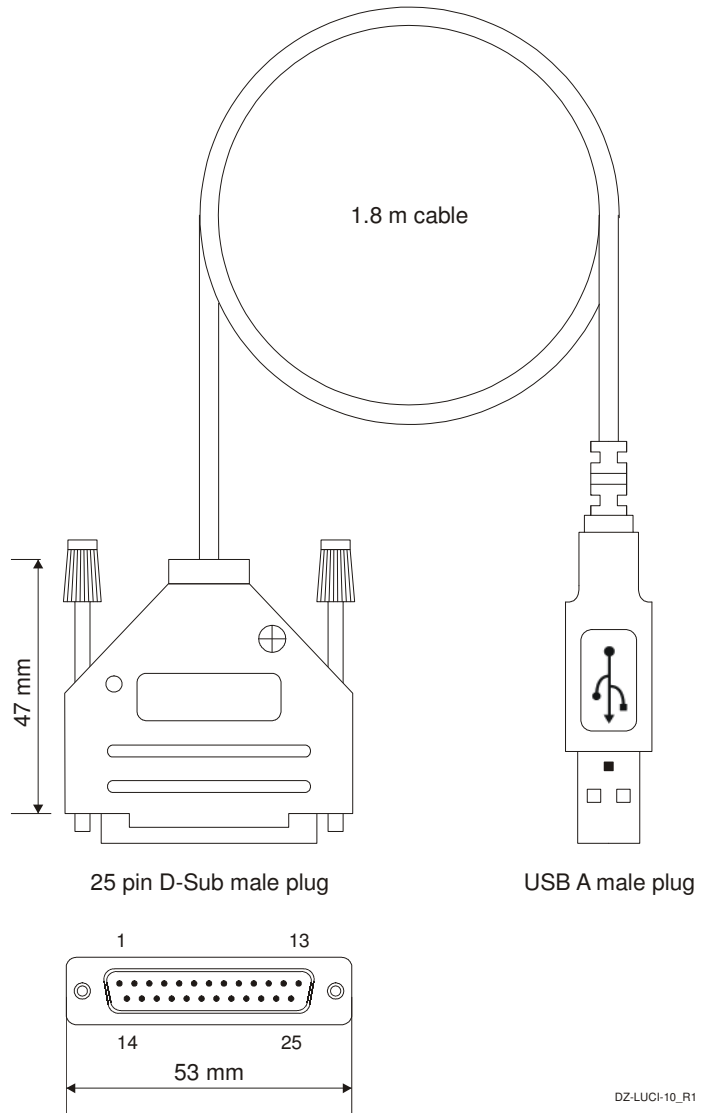

Specifications are subject to change without notice. Information provided herein is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.

© by FEMTO Messtechnik GmbH · Printed in Germany